HANDLING CAUTION AND INSTRUCTION MANUAL

Automatic Electric Gun





www.modify-tech.com/download.php

WARNING!

+18 NOT A TOY.USER RESTRICTED TO 18 YEARS OF AGE OR OLDER



ALWAYS KEEP THE AIRSOFT GUN POINTED IN A SAFE DIRECTION. THIS AIRSOFT GUN MAY CAUSE SERIOUS INJURY IF MISUSED OR MISHANDLED



ALWAYS READ THROUGH ALL INSTRUCTIONS BEFORE USING

THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING OWNERSHIP. TRANSPORT AND USE OF AIRSOFT GUNS.

Surprising and Amazing always come with MODIFY











② Handling cautions and instruction manual



③ BB pellets

④ Front sight tool adjustment

XTC-G1 Automatic Electric Gun Specifiction		
Name	Xtreme Tactical Carbine-G1	
Major Color	BLK	
Weight	2.6 KG	
Overall	804 mm / 889 mm (with stock extended)	
Barrel Length	363 mm	
Barrel Caliber	6.1 mm	
Pellet	6 mm BB	
Magazine Capacity	190 rounds	
Shooting Mode	Full Auto, Semi Auto and Safety (45° Safety Selector)	
Muzzle Valesity (Adjusteble)	Step 1 : 360 FPS Step 2 : 394 FPS	
Muzzle Velocity (Adjustable)	Step 1 : 278 FPS Step 2 : 315 FPS	

WARNING


- The operation procedure varies according to the model. Make sure to operate an airsoft gun after recognizing its features.
- We are not responsible for any accidents, events, injuries or repair costs arising from wrong operation and handling or by modification and disassembly of the gun.

Notice before operation :

- After receipt the **XTC-G1**, immediately unpack and inspect it for any shipping damage or missing parts. If any sign of damage or missing parts are fund, immediately notify the dealer.
- Promptly request a copy if you lose the Handling Cautions and Instruciton Manual.




151 EXPLODED VIEW

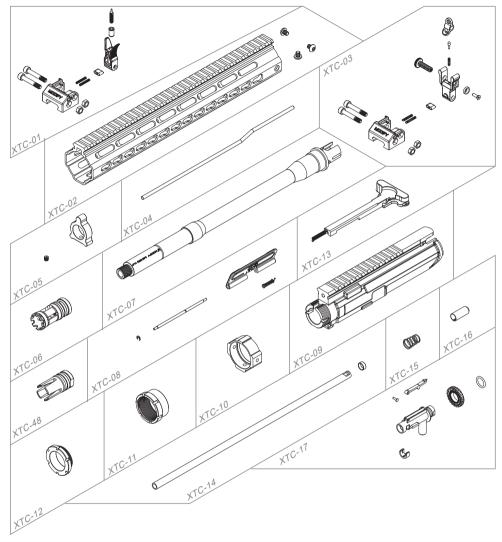

XTC-01 Front Sight	XTC-48 Flash Hider (Orange tip)	XTC-12 Barrel Nut
XTC-02 Key Mod Rail	XTC-07 Outer Barrel	XTC-13 Charging Handle Set
XTC-03 Rear Sight	XTC-08 Bolt Cover	XTC-14 Inner Barrel
XTC-04 Gas Tube	XTC-09 Upper Receiver	XTC-15 Hop Up Spring
XTC-05 Gas Block	XTC-10 Rear Base	XTC-16 Hop Up Bucking
XTC-06 Flash Hider	XTC-11 Rear Lock Ring	XTC-17 Hop Up Chamber



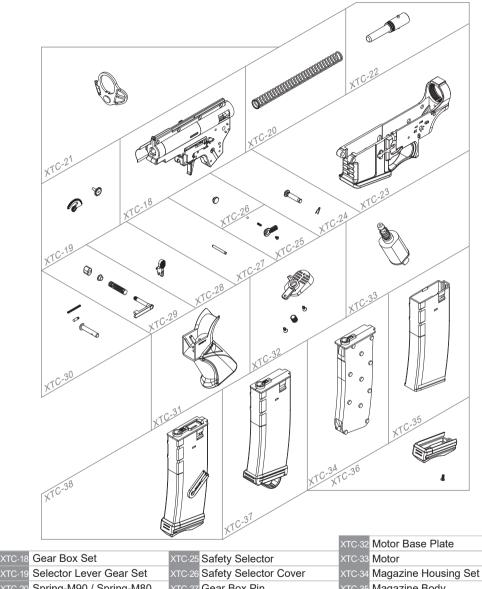


XTC-20 Spring-M90 / Spring-M80	XTC-27 Gear Box Pin	XTC-35 Magazine Body
XTC-21 Swivel Sling	XTC-28 Bolt Catch	XTC-36 Magazine Base Plate
XTC-22 Spring Guide	XTC-29 Magazine Catch Set	Option
XTC-23 Lower Receiver	XTC-30 Take Down Pin Set (Front)	XTC-37 Bhive 150-Round AEG Tracer Magazine
XTC-24 Take Down Pin Set (Rear)	хтс-31 Grip	XTC-38 J-Mag 300-Round AEG Tracer Magazine

XTC-19






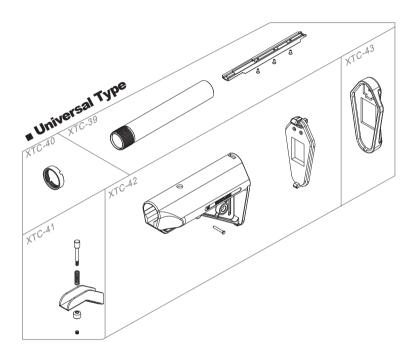

XTC-39 Stock Buffer Tube A	XTC-41 Stock Release Lever Set	XTC-43 Stock Pad
XTC-40 Buffer Tube Retainer	XTC-42 Crane Stock Set	



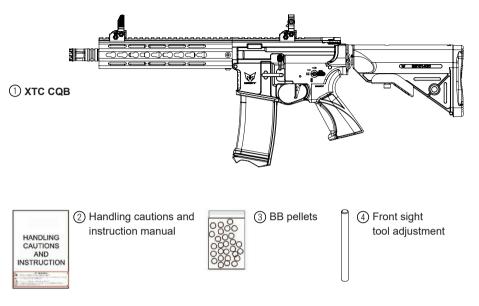

XTC CQB Automatic Electric Gun Specifiction		
Name	Xtreme Tactical Carbine CQB	
Major Color	BLK	
Weight	2.5 KG	
Overall	678 mm / 763 mm (with stock extended)	
Barrel Length	257 mm	
Barrel Caliber	6.1 mm	
Pellet	6 mm BB	
Magazine Capacity	190 rounds	
Shooting Mode	Full Auto, Semi Auto and Safety (45° Safety Selector)	
Muzzle Velocity (Adjustable)	Step 1 : 337 FPS Step 2 : 370 FPS	
wuzzie velocity (Aujustable)	Step 1 : 280 FPS Step 2 : 302 FPS	

WARNING


- The operation procedure varies according to the model. Make sure to operate an airsoft gun after recognizing its features.
- We are not responsible for any accidents, events, injuries or repair costs arising from wrong operation and handling or by modification and disassembly of the gun.

Notice before operation :

- After receipt the XTC CQB, immediately unpack and inspect it for any shipping damage or missing parts. If any sign of damage or missing parts are fund, immediately notify the dealer.
- Promptly request a copy if you lose the Handling Cautions and Instruction Manual.




251 EXPLODED VIEW

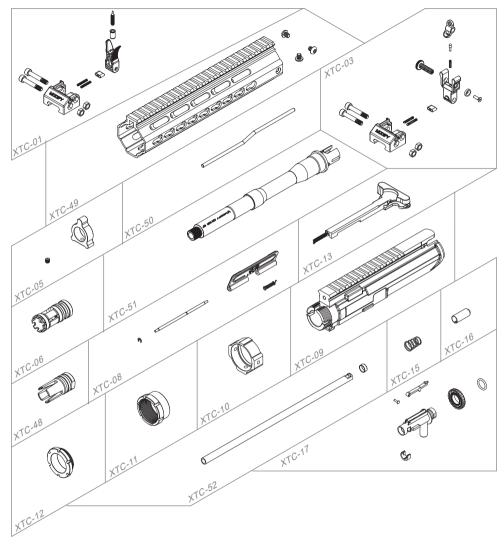

XTC-01 Front Sight	XTC-48 Flash Hider (Orange tip)	XTC-12 Barrel Nut
XTC-49 Key Mod Rail	XTC-51 Outer Barrel	XTC-13 Charging Handle Set
XTC-03 Rear Sight	XTC-08 Bolt Cover	XTC-52 Inner Barrel
XTC-04 Gas Tube	XTC-09 Upper Receiver	XTC-15 Hop Up Spring
XTC-05 Gas Block	XTC-10 Rear Base	XTC-16 Hop Up Bucking
XTC-06 Flash Hider	XTC-11 Rear Lock Ring	XTC-17 Hop Up Chamber




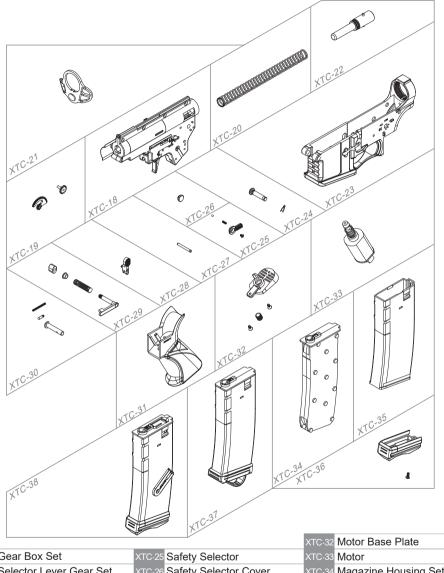

XTC-18	Gear Box Set	XTC-25	Safety Selector	XTC-33	Motor
XTC-19	Selector Lever Gear Set	XTC-26	Safety Selector Cover	XTC-34	Magazine Housing Set
XTC·20	Spring-M110 / Spring-M90	XTC-27	Gear Box Pin	XTC-35	Magazine Body
XTC-21	Swivel Sling	XTC-28	Bolt Catch	XTC-36	Magazine Base Plate
XTC-22	Spring Guide	XTC-29	Magazine Catch Set		Option
XTC·23	_ower Receiver	XTC-30	Take Down Pin Set (Front)	XTC-37	Bhive 150-Round AEG Tracer Magazine
XTC-24	Take Down Pin Set (Rear)	XTC-31	Grip	XTC-38	J-Mag 300-Round AEG Tracer Magazine





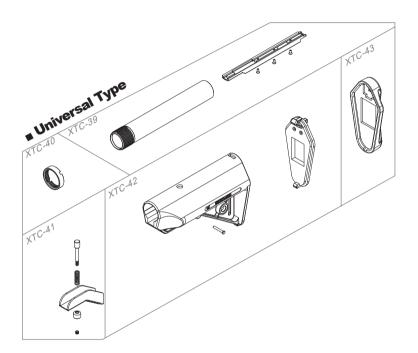

XTC-39 Stock Buffer Tube A	XTC-41 Stock Release Lever Set	XTC-43 Stock Pad
XTC-40 Buffer Tube Retainer	XTC-42 Crane Stock Set	



1 XTC PDW





② Handling cautions and instruction manual



③ BB pellets

④ Front sight tool adjustment

XTC PDW Automatic Electric Gun Specifiction		
Name	Xtreme Tactical Carbine PDW	
Major Color	BLK	
Weight	2.5 KG	
Overall	590 mm / 675 mm (with stock extended)	
Barrel Length	205 mm	
Barrel Caliber	6.1 mm	
Pellet	6 mm BB	
Magazine Capacity	190 rounds	
Charting Made	Full Auto, Semi Auto and Safety	
Shooting Mode	(45° Safety Selector)	
Muzzle Velocity (Adjustable)	335 ±10 FPS	
wuzzie velocity (Aujustable)	280 ±10 FPS	

WARNING


- The operation procedure varies according to the model. Make sure to operate an airsoft gun after recognizing its features.
- We are not responsible for any accidents, events, injuries or repair costs arising from wrong operation and handling or by modification and disassembly of the gun.

Notice before operation :

- After receipt the XTC PDW, Immediately unpack and inspect it for any shipping damage or missing parts. If any sign of damage or missing parts are fund, immediately notify the dealer.
- Promptly request a copy if you lose the Handling Cautions and Instruction Manual.




3-1 EXPLODED VIEW

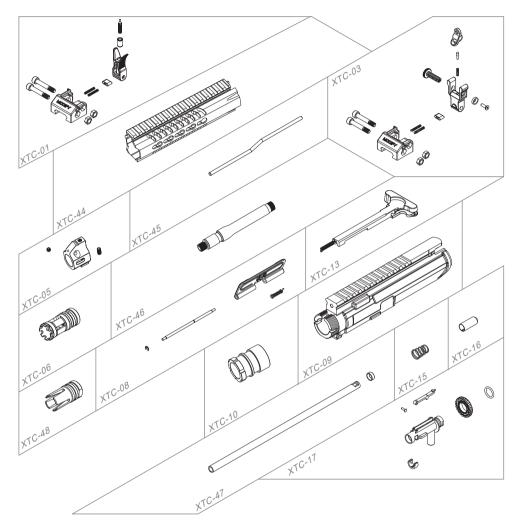

XTC-01 Front Sight	XTC-48 Flash Hider (Orange tip)	XTC-47 Inner Barrel
XTC-44 Key Mod Rail	XTC-46 Outer Barrel	XTC-15 Hop Up Spring
XTC-03 Rear Sight	XTC-08 Bolt Cover	XTC-16 Hop Up Bucking
XTC-45 Gas Tube	XTC-09 Upper Receiver	xTC·17 Hop Up Chamber
XTC-05 Gas Block	XTC-10 Rear Base	
xTC-06 Flash Hider	XTC-13 Charging Handle Set	




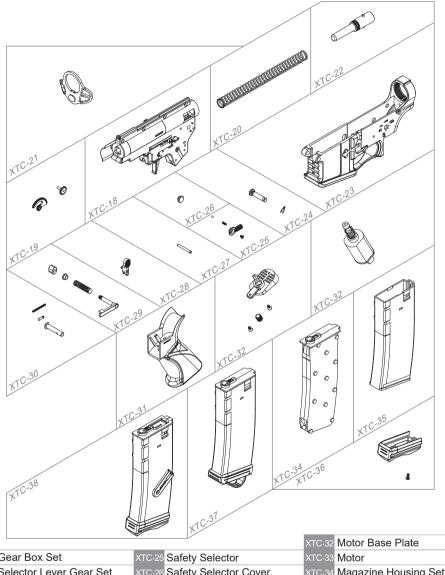

XTC-18 Gear Box Set	XTC-25 Safety Selector	XTC-33 Motor
XTC-19 Selector Lever Gear Set	XTC-26 Safety Selector Cover	XTC-34 Magazine Housing Set
XTC-20 Spring-M110 / Spring-M90	XTC-27 Gear Box Pin	XTC-35 Magazine Body
XTC-21 Swivel Sling	XTC-28 Bolt Catch	XTC-36 Magazine Base Plate
XTC-22 Spring Guide	XTC-29 Magazine Catch Set	Option
XTC-23 Lower Receiver	XTC-30 Take Down Pin Set (Front)	XTC-37 Bhive 150-Round AEG Tracer Magazine
XTC-24 Take Down Pin Set (Rear)	XTC-31 Grip	XTC-38 J-Mag 300-Round AEG Tracer Magazine





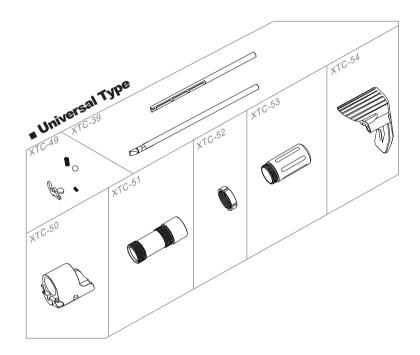

XTC-39 Stock Poles	XTC-51 Stock Center Pole	XTC-54 Butstock
XTC-49 Stock Parts	XTC-52 Stock Pad	
XTC-50 Stock Sliding Lock Block	XTC-53 Battery cap	

4 WARNING & CAUTIONS



Always wear eye protective gear. When shooting the airsoft gun for a target or game, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. (Pay sufficient attention also to third personnel other than participants.



Never aim or shoot a person or animal as the target.



BB pellets may be shot out even if the magazine is removed.




Never shoot the airsoft gun at places where people and cars pass cross.



Never shoot as joking, always look before shooting, the careless use may cause injure and be punished.



Avoid pulling the trigger carelessly.

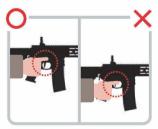

Always keep your finger off the trigger until ready to shoot.



Never look into the airsoft gun muzzle.



Do not carryout the airsoft gun in public place, put into a case or bag for carrying.



Never disassemble or modify the airsoft gun, it may cause the trouble.



Store the airsoft gun at places out of reach by children.

5 SETTING BATTERY

MODIFY Xtreme Tactical Carbine


WARNING S



©Conduct operations hereafter charging the battery.

©The magazine is done under the condition that it is removed.

Stock must be fully collapsed before opening the stock cover. **Set fire selector to safe mode** : Please set the selector to the Safe position.

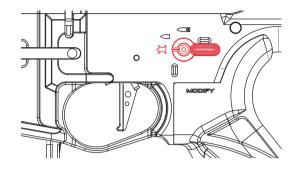


1)Slightly push the button to open the cover.

3)Push the connector plugs together firmly until they click into place.

2)Slide the battery into the crane stock and plug back into the buffer tube.

4)Close the butt stock cover.

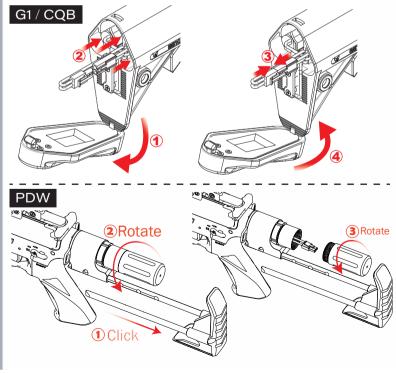


6 SETTING THE OPEN SIGHT

FRONT SIGHT

1.Use the front sight :

Lift the sight when using.

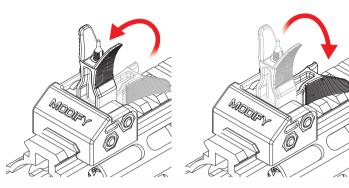


2.Front sight adjustment :

The adjustment tool covers the front sight, it turns, and the top and bottom of the pellet hitting point is adjusted.

Be sure not to lose the adjustment tool.

WARNING CAUTION

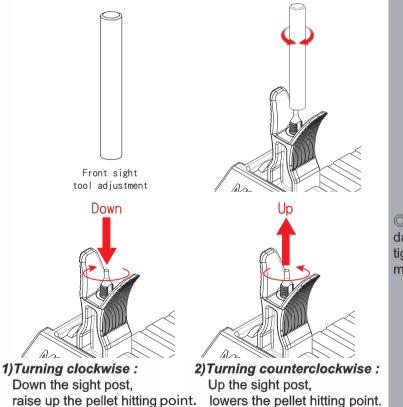

Olt may cause damage when tightening too much.

7 MOVABLE PARTS




WARNING CAUTION

OBe carefully and don't get hurt when using the crane stock.

1.Operate the Crane Stock :


Adjust length of six positions, adjust to the most comfortable position.

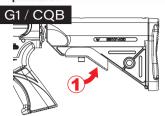




2)Then adjust the stock position

1)Push the stock release button

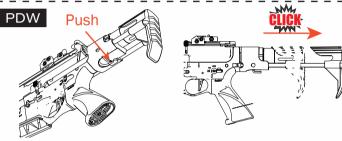

2.Charging :

The Charging handle can be pulled and the dummy bolt will be fastened.

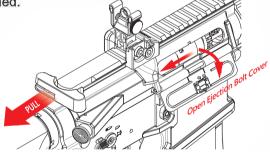


OBe carefully and do not get hurt when press the bolt catch.

forward while charging handle in

the rear position.


3.Bolt Catch : To release bolt, just press the bolt catch.

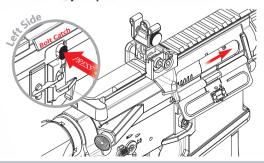


8 MOVABLE PARTS

1.Change spring :


- 1) Slightly push the button to open the cover.
- (Please read the page 8 > 9 before removing battery.)
- 2) Insert long hexagonal key.
- 3) Turn counterclockwise to decrease FPS.
- 4) Turn counterclockwise again to release spring.

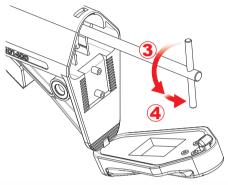

5) Draw out spring and spring guide.

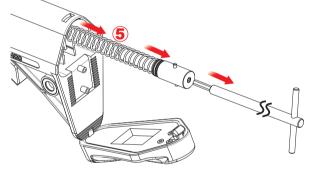

- 6) Follow the drawing to install the parts with long hexagonal key sequentially.
- 7) Turn clockwise to install the parts.

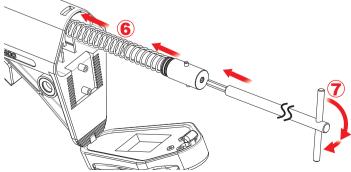

Before changing spring, stock must be fully collapsed and battery must be removed.

Only XTC-G1 and CQB can decrease FPS

9 ADJUSTABLE HOP-UP SYSTEM

WARNING CAUTION

ONever use any used and dirty pellets.

O Moving the adjustment dial too much towards HOP may cause clogging of pellets. If pellet clogging occurs, immediatelv stop firing, return the hop to the normal position, and remove clogging pellets, otherwise the piston and gears will be damaged, if it continues shooting then.


1.Adjustable Hop-Up System :

By producing a back-spin on the BB pellets, this system allows for horizontal shooting toward a long distance target. The Modify adjustable HOP-UP system can tune finely that a spin stars using the adjustment dial.


2.Method of adjustment :

Adjust by carrying out trial firing, referring to page 15 "Firing"

1)Pulling the charging handle can open bolt cover to adjust HOP-UP system.

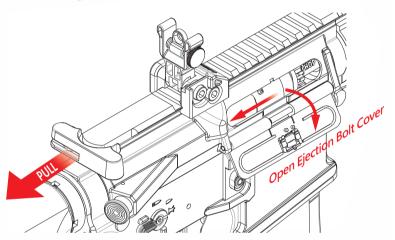


2)Gradually turn the adjustment dial .

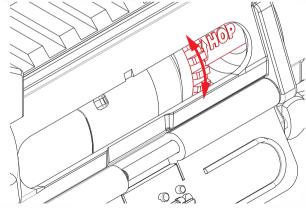

% Turning excessively adversely affects the trajectory. So, stop turning the hop up adjustment dial when pellets fly horizontally.

10 ADJUSTABLE HOP-UP SYSTEM

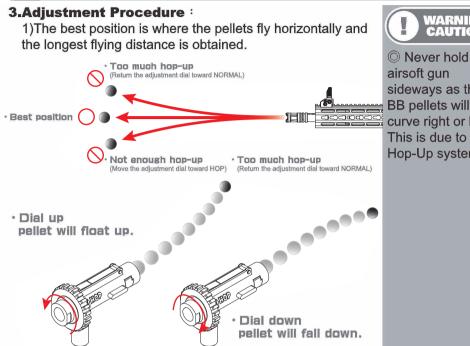

2)When about 5,000~10,000 rounds are fired, spray silicone oil to the chamber for 0.5 to 1 sec.

When Hop Up is improper						
Symptom	Cause	Action				
Severe flying up.	Too much HOP setting.	Gradually return adjustment dial				
	Not enough Hop setting	towards Normal.				
Short flying distance of pellets. (less hopping up effect)	Hop Up bucking is contaminated by oil or dirt.	Fire pellets equivalent to 4 or 5 magazines or clean the chamber using the cleaning rod.				
	Badly worn hop up bucking.	Purchase the replacement part at your dealer or from Modify and replace it.				
Cannot adjust	Damaged adjustment dial or other worn parts.	Purchase the replacement part at your dealer or from Modify and replace it.				
	Too much HOP setting.	Gradually return adjustment dial towards Normal.				
Frequent pellet clogging	Improper or too large sized BB pellets.	Use the BB pellet supplied by MODIFY.				
	Dirty bore.	Clean using the cleaning rod or consult your dealer or MODIFY for repair.				

NARNING CAUTION

O Never hold the sideways as the curve right or left. This is due to the Hop-Up system.

TROUBLE CLINIC

	Symptoms	Cause	Action
1	BB pellet travels upward	Too much Hop-Up setting.	Gradually return adjustment dial towards Normal.
2	Short flying distance of pellets. (less Hop-Up effect)	Too much Hop-Up setting.	Gradually return adjustment dial towards Normal.
		Hop-Up bucking is contaminated by oil or dirt.	Fire pellets equivalent to 4 or 5 magazines or clean the chamber using the cleaning rod.
		Worn Hop-Up bucking.	Purchase the replacement part at your dealer or from Modify and replace it.
3	Cannot adjust	Damaged adjustment dial or other worn part.	Purchase the replacement part at your dealer or from MODIFY and replace it.
	Frequent pellet clogging	Poor BB pellet (distorted in roundness)	Use the BB pellet supplied by MODIFY.
4		Too much Hop-Up setting	Gradually return adjustment dial towards Normal.
		Dirty Hop-Up packing	Clean using the cleaning rod or consult your dealer or MODIFY for repair.
	Motor is running but no pellet can be fired.	Pellets are clogged inside the magazine.	Insert the charging rod into the magazine and move it up and down a few times.
5		Pellets are clogged in the chamber.	Remove clogged pellets using the cleaning rod.
		Faulty gear or internal compo- nents was damaged.	Purchase the replacement part at your dealer or from Modify and replace it.
	BB pellets roll out from the barrel	Poor BB pellet (too small sized BB pellets)	Use the BB pellet supplied by MODIFY.
6		Worn or damaged hop up bucking.	Purchase the replacement part at your dealer or from Modify and replace it.
	Overly loud operating noise	Piston problem caused by too many blank firing.	Purchase the replacement part at your dealer or from Modify and replace it.
7		Worn or damaged gears.	Purchase the replacement part at your dealer or from Modify and replace it.
			Adjust motor base plate.
	3 4 5 6	 BB pellet travels upward BB pellet travels upward Short flying distance of pellets. (less Hop-Up effect) Cannot adjust Frequent pellet clogging Motor is running but no pellet can be fired. BB pellets roll out from the barrel 	1BB pellet travels upwardToo much Hop-Up setting.2Short flying distance of pellets. (less Hop-Up effect)Too much Hop-Up setting.3Cannot adjustHop-Up bucking is contaminated by oil or dirt.3Cannot adjustDamaged adjustment dial or other worn part.4Frequent pellet cloggingPoor BB pellet (distorted in roundness)5Motor is running but no pellet can be fired.Pellets are clogged in the chamber.6BB pellets roll out from the barrelPoor BB pellet (too small sized BB pellets)6BB pellets roll out from the barrelPoor BB pellet (too small sized BB pellets)7Poor BB pellet (too small sized BB pellets)8Poor BB pellet (too small sized BB pellets)9Poor BB pellet (too small sized BB pellets)9Poor BB pellet (too small sized BB pellets)9Piston problem caused by too many blank firing.

12 TROUBLE CLINIC

	Symptoms	Cause	Action	M
8	Malfunction of full auto	Insufficient battery power.	Charge the battery.	MODIFY Xtreme
		Faulty pellet feed of magazine.	Repair clogging of the magazine.	Xtre
9	Malfunction of semi auto	Insufficient battery power.	Charge the battery.	
		Poor electric connection.	Consult your dealer or Modify overhaul maintenance or repair.	actica
		Worn or damaged hop up bucking.	Purchase the replacement part at your dealer or from Modify and replace it.	Tactical Carbine
		Worn or damaged piston set (O-ring, piston, spring)	Purchase the replacement part at your dealer or from Modify and replace it.	-bine
		Shortage of silicone oil.	Place a few drops of silicone oil onto the upper chamber.	
		Deviation in gear timing.	Fire 5~6 rounds in full auto then switch back to semi auto again.	
		Gear problem caused by too many blank firing.	Purchase the replacement part at your dealer or from Modify and replace it.	
10	No operation at all	Selector dial is set to safety.	Set the selector to AUTO or SEMI.	
		Battery is dead.	Replace or Charge the battery.	
		Battery connector is disconnect.	Connect the connector.	
		Expired motor life (50,000 to 60,000) or poor motor electrical connection.	Replace the dead motor. Check and repair the motor.	
		The fuse blew out.	Replace the fuse.	
11	If gun gets wet	Stop operation immediately, disconnected the battery. Wipe off water from inside the body and battery also. After confirmation the gun is completely dry, test fire. If there has no operation, please contact your local dealer for repair.		



MODIFY and its logo are registered trademarks. We promise our customers the best services and premium quality products with value. Please visit our website at www.modify-tech.com.tw and leave your comments.

886-3-379-8879

MODIFY-TECH CO., LTD.

(F) https://www.facebook.com/modifyairsoft/

(
 https://www.instagram.com/modifytechtw/

(b) http://www.youtube.com/c/modifytw

NO.21,Ln.384, Yongfeng Rd. Bade Dist, Taoyuan City 334015, Taiwan

886-3-369-5091 sevice@modify.com.tw